

Anbauanleitung: Schutzblech für Heckfenster
Für Racksysteme Pickups 55-01 und 55-02

AL: 2259-01


Best.Nr.: 55-01-016

Montagezeit: ca. 10 min.

Hier sehen sie das Racksystem für Pickups mit einem Schutzblech für das Heckfenster. Bevor sie mit der Montage beginnen, lesen sie bitte diese Anleitung gut durch. Querträger oder Plattformen und die Basisversionen 55-01 oder 55-02 sind nicht Bestandteil dieses Anbausatzes und müssen extra bestellt werden. Alle Schrauben mit Anti-Seize behandeln! Zur Montage wird die Schutzstrebe Art.Nr: 55-01-015, 2x benötigt

*Here you can see the rack system for pickups with a protection sheet for the rear window. Before you start fitting, please read and understand this instruction manual. Crossbars or roof racks and the basic versions 55-01 or 55-02 are not part of this mounting kit and must be ordered separately. Treat all screws with Anti-Size!
The protective strut Art.Nr: 55-01-015, 2x is required for assembly.*



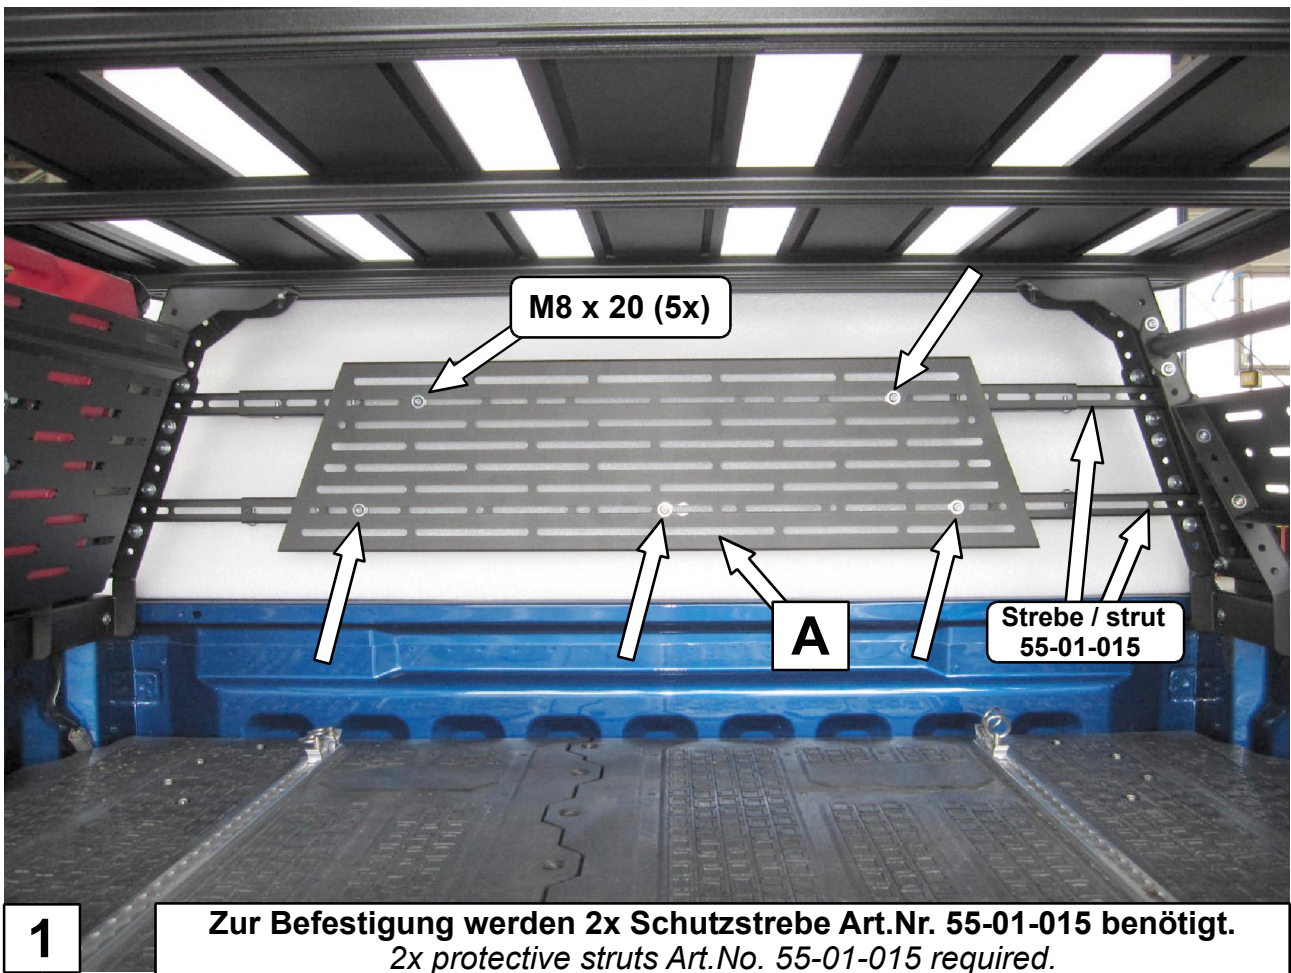

1

**Zur Befestigung werden 2x Schutzstrebe Art.Nr. 55-01-015 benötigt.
2x protective struts Art.No. 55-01-015 required.**

Schrauben Anzugsmomente	
Schraubengröße	Güteklasse - 8.8
M6	10 Nm
M8	25 Nm
M10	50 Nm
M12	87 Nm
M14	138 Nm
M16	210 Nm